




SHR3D IT

Quick Start Guide

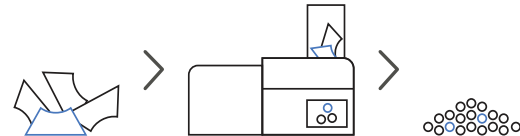

What is in the box:

- SHR3D IT
- Hopper
- Granulate collector
- Power cable


Quick start or complete manual

In this quick start you will find the essential instructions to set up your SHR3D IT, right out of the box. For more detailed information about the functions and applications of the SHR3D IT, you can visit our website:

www.3devo.com/manuals

What is where?

1. Power socket
2. Power switch
3. High current indicator
4. High temperature indicator
5. Start button (green)
6. Reverse button (white)
7. Stop button (red)
8. Emergency button
9. Interlock guard
10. Granulate collector
11. Granulator compartment
12. Shredder compartment
13. Hopper locking lever
14. Hopper

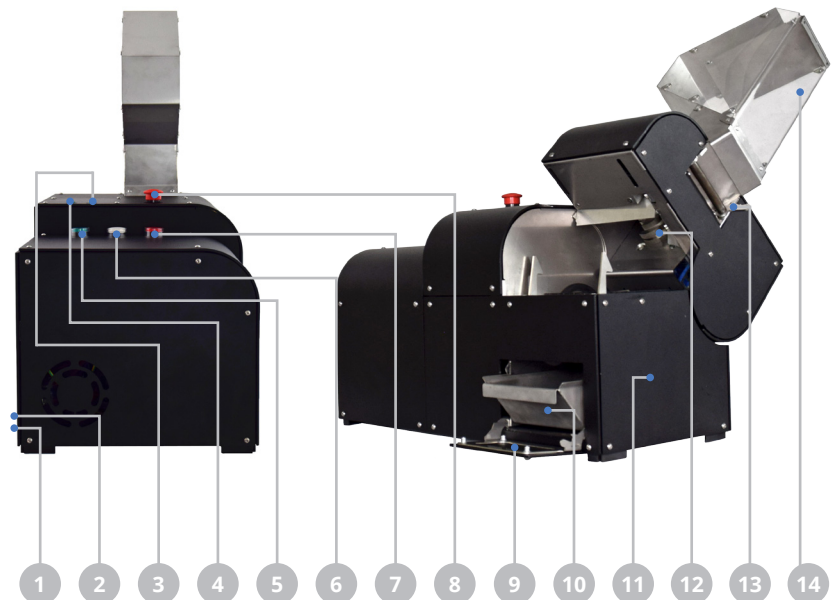

Warranty

For information about the 3devo warranty policy visit:

www.3devo.com/warranty

Support

For more information or technical support visit:

www.3devo.com/support

Safety instructions

- Wrong use of the machine and/or manipulating safety switches may lead to severe injuries or failure of the machine. The manufacturer is not liable for any problems caused by the user's failure to observe the instructions stated in the manual.
- Check if the voltage in your power socket corresponds to that of the purchased product.
- Always wear personal protective equipment during use of the machine. Wear ear protection, safety glasses and cut resistant gloves when working with knives. Wear a gas mask when working with plastics that release toxic gasses or dust.
- Never change or remove guards when the machine is powered.
- Do not shred non-plastics.
- Thoroughly read and adhere to ALL the safety instructions as stated in the manual:

www.3devo.com/manuals

Remove the packaging

Remove the top accessory box. Then remove the top foam blocks. Lift out the SHR3D IT with two persons and place it on a flat surface. Finally remove the plastic cover bag from the SHR3D IT.

Set up the Shredder



1) Push hopper locking lever down and slide hopper inside. Release lever to lock the hopper in place.



2) Open interlock guard.




3) Slide the granulate collector in.



4) Close interlock guard.




5) Plug in the power cable and turn on the power switch at the back of the machine.

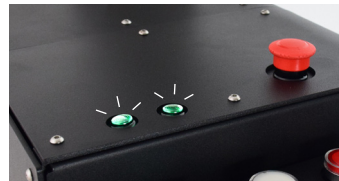


6) Check if both indicator lights are turned on.



7) Press the green button down for one second to start the machine.

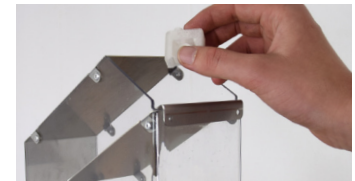

8) Throw in plastic parts and wait until the part is processed into granulate.

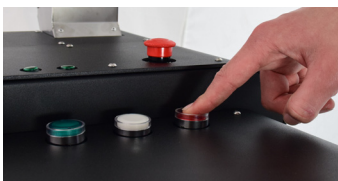

9) Press the red button down to stop the machine.



10) Open the interlock guard to slide out the granulate collector.